


5-POCKET FOLDOVER WALLET

INSTRUCTIONS

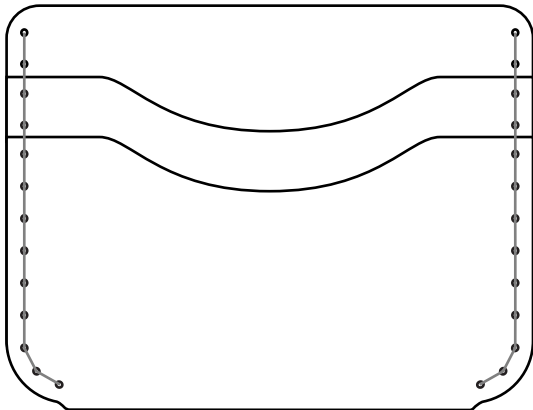

BUCKLEGUY

LEATHERCRAFT SUPPLY

LEATHER

1. BACK (X2)
2. T-POCKET (X2)
3. WRAP POCKET

STITCHING AND BURNISHING SUPPLIES

+NEEDLES

+THREAD(S):






A. T-POCKETS (X2) 16"

B. OUTER EDGES (X2) 25"

+CANVAS

+SANDPAPER

+BEESWAX

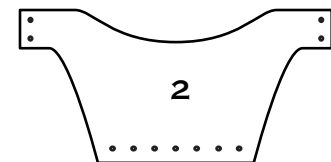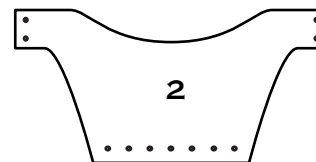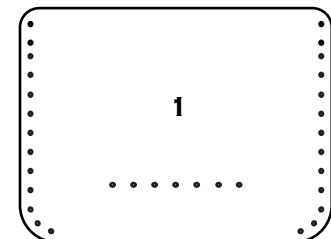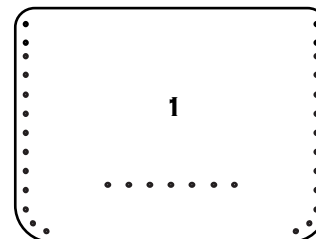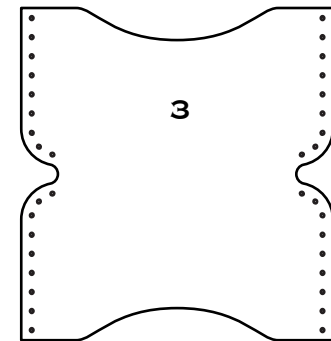



YOU SHOULD KNOW

PAPER BINDER CLIPS ARE PERFECT FOR HOLDING LAYERS OF LEATHER TOGETHER WHILE YOU STITCH. THEY SERVE THE PURPOSE OF SEWING PINS.




ALL STITCHING START POINTS ARE MARKED WITH A STAR.




FLESH VS. GRAIN COLORATION



STEP 1: (Optional) Burnish the top and bottom of the wrap pocket (3), the tops of the t-pockets (2), and tops of the backs (1) marked by grey lines below:

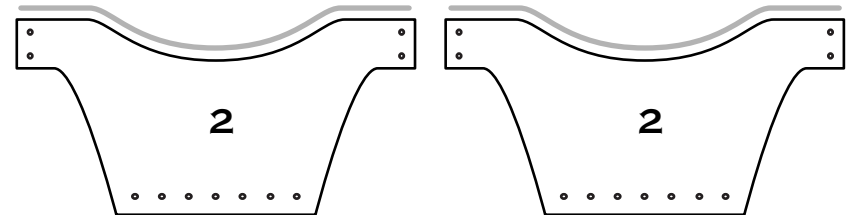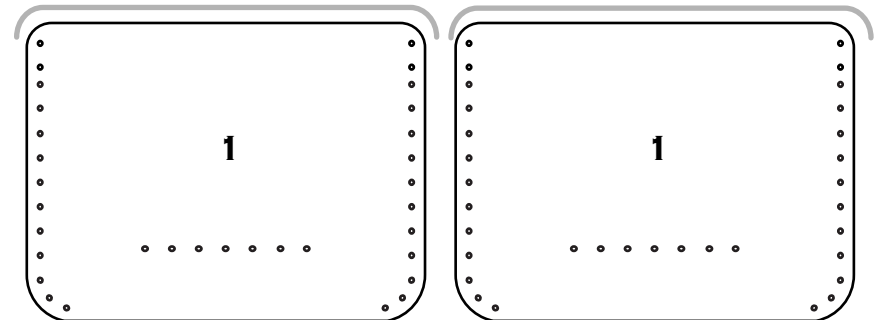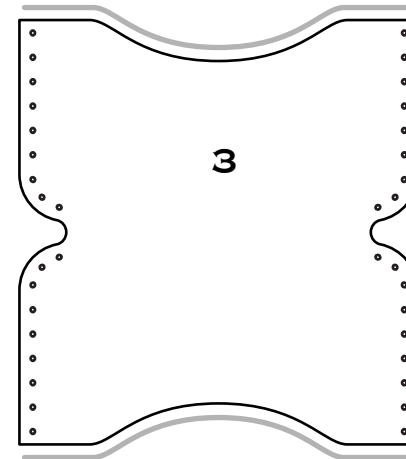


STEP 2: Saddle stitch the 7 hole bottom seam of the T-pockets (2) onto the backs (1). Prepare your needles. Lay one T-pocket (2) onto one back (1) flesh side to grain side, lining up the seven holes at the bottom of the T-pocket (2) to the seven holes on the back (1). Begin your saddle stitch by threading the needle through the farthest left hole. Saddle stitch the T-pocket (2) onto the back (1) until you reach the farthest hole on the right. Back stitch and pull both needles through to the grain side of the T-pocket (2). Snip and carefully bun threads. ** tip: using a heavy object, flatten down these stitches **

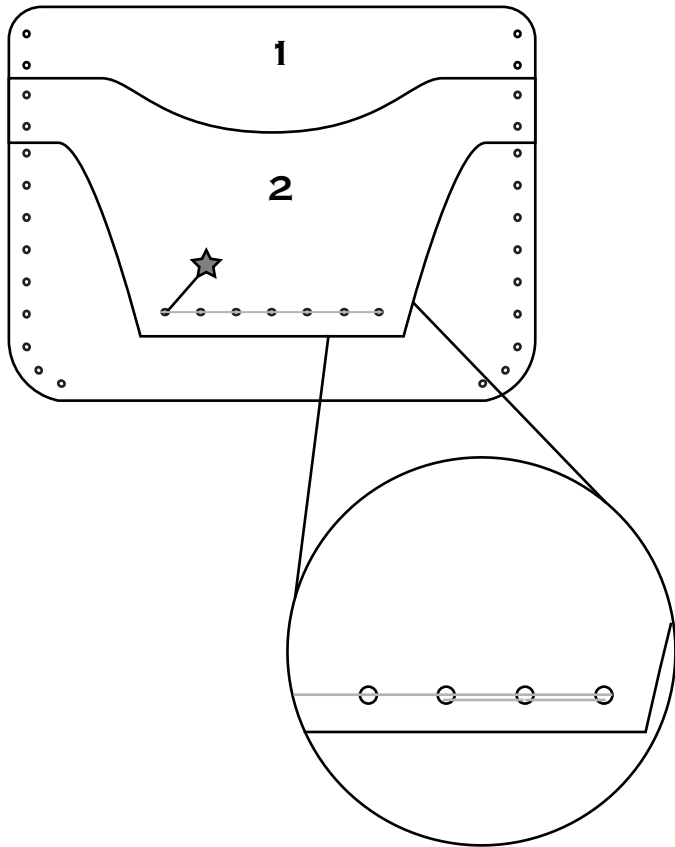

BUCKLEGUY

LEATHERCRAFT SUPPLY



STEP 3: Repeat step 2 exactly for the second T-pocket (2) and the second back (1).

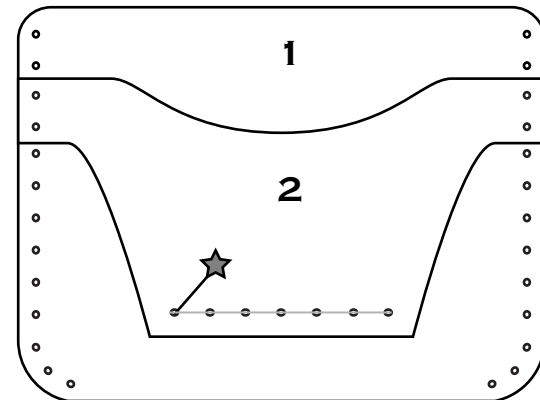

STEP 4: Fold the wrap pocket (3) in half and sandwich the stitched backs (1) flesh sides together between the fold. Saddle stitch the wrap pocket (3) onto the prepared backs (1). Prepare your needles. Starting on the left side of the wallet, begin with your needle in the top left stitching hole. Begin to saddle stitch all the way down the left side. When you reach the bottom, back stitch twice. Pull both needles through to one side, snip and carefully burn threads.

ILLUSTRATION ON NEXT PAGE:


STEP 4 CONTINUED:

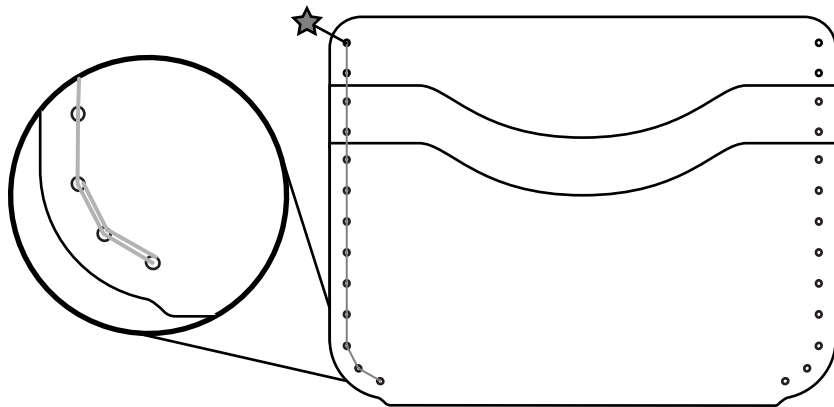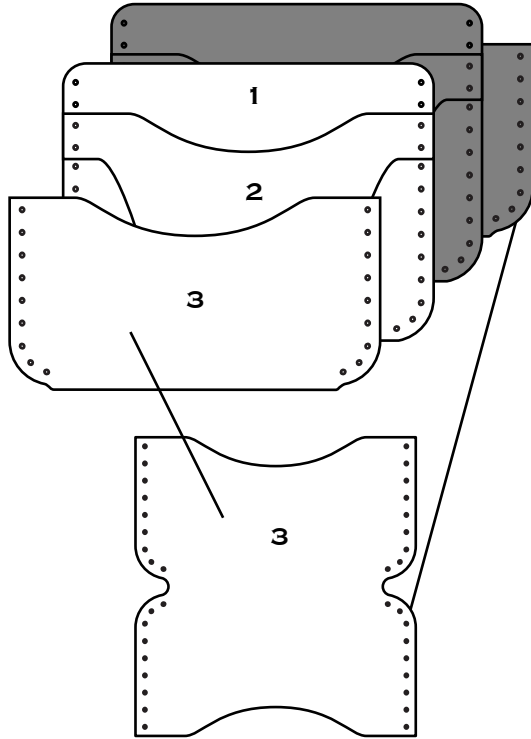


BUCKLEGUY

LEATHERCRAFT SUPPLY

STEP 5: Repeat step 4 on the right side of the wallet.

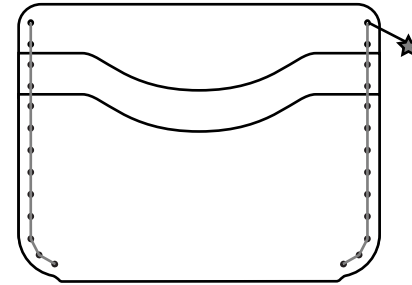

STEP 6: (Optional) Sand and burnish all stitched edges of the wallet marked by the grey lines below.

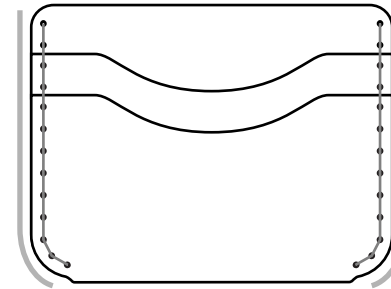

**ALL DONE! ENJOY
YOUR NEW WALLET!**

THANKS FROM ALL OF US AT BUCKLEGUY!

SHARE YOUR PROJECTS WITH US ON
SOCIAL MEDIA

BY USING THE HASHTAG #BGKITS

