



STEP 2: Line up all four pieces. Lay the front pocket (1) onto the front (2) flesh side to grain side. Then lay the back pocket (4) onto the back (3), flesh side to grain side. Lastly, combine these two together, laying the flesh side of the front (2) onto the flesh side of the back (3). Binder clips are helpful at this point.

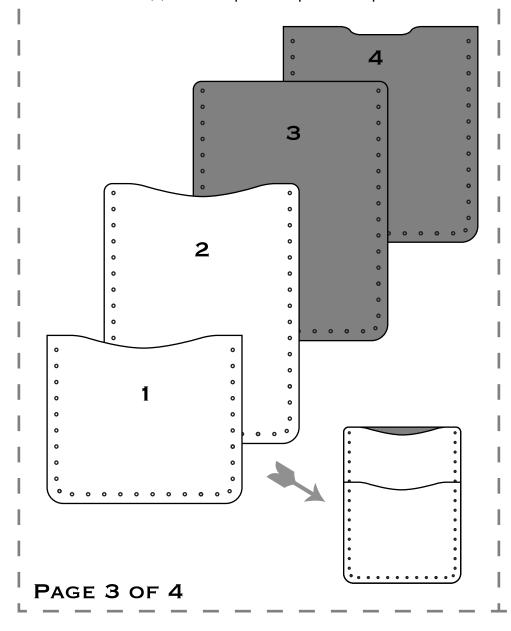


BUCKLEGUY


STEP 3: Begin with your needle in the top left corner of the wallet. Saddle stitch down the left side seams, attaching all four layers together. Continue your stitch along the bottom seam, and up the right side seam. When you reach the final hole at the top right corner, back stitch twice. Pull both needles through to the grain side of the back (3). Carefully snip and burn threads.

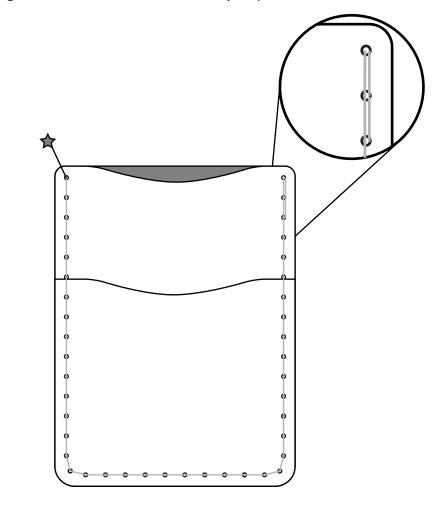

STEP 4: (Optional) Sand and then burnish finished outer seam marked by the grey line below.

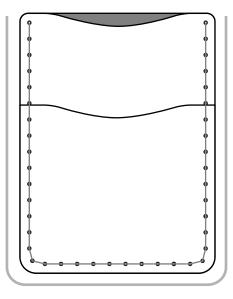

STEP 5: Slide money clip into back pocket (4).

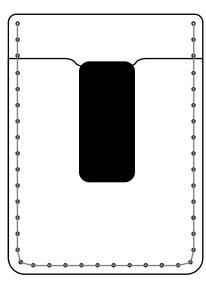

BUCKLEGUYI LEATHERCRAFT SUPPLY ALL DONE! ENJOY YOUR NEW WALLET! (O) @BUCKLEGUYCOM THANKS FROM ALL OF US AT BUCKLEGUY! f @BUCKLEGUY SHARE YOUR PROJECTS WITH US ON SOCIAL MEDIA $(oldsymbol{p})$ @вискleguy BY USING THE HASHTAG #BGKITS (►) @BUCKLEGUY.COM

Page 4 of 4