


PASSPORT COVER

INSTRUCTIONS

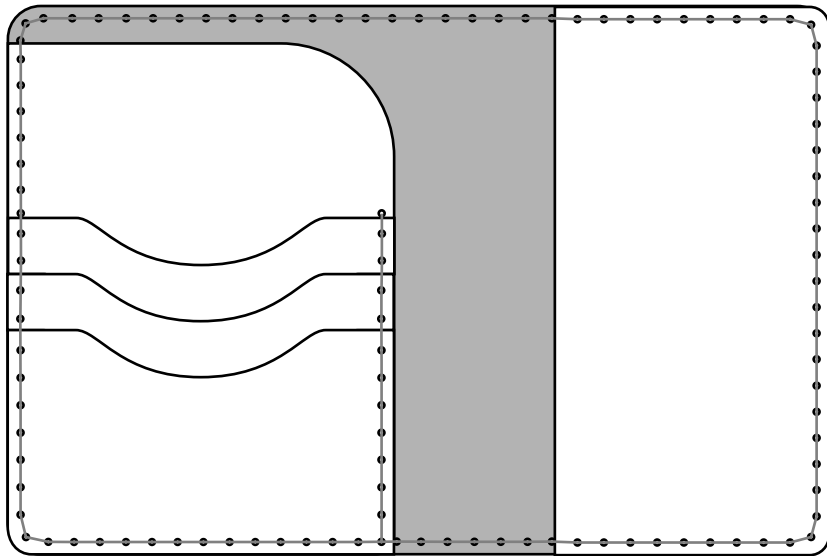

BUCKLEGUY






LEATHERCRAFT SUPPLY

STITCHING AND BURNISHING SUPPLIES

- + NEEDLES
- + THREAD:
 - A. T POCKETS (X2) 13"
 - B. LEFT SIDE (X1) 25"
 - C. ALL THE WAY AROUND (X1) 100"
- + CANVAS
- + SANDPAPER
- + BEESWAX

LEATHER

1. FRONT PANEL
2. PASSPORT POCKET
3. BOARDING PASS POCKET
4. T-POCKETS (X2)
5. CARD POCKET

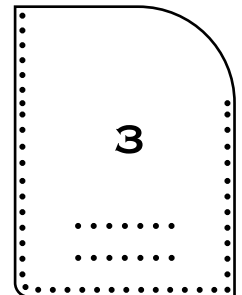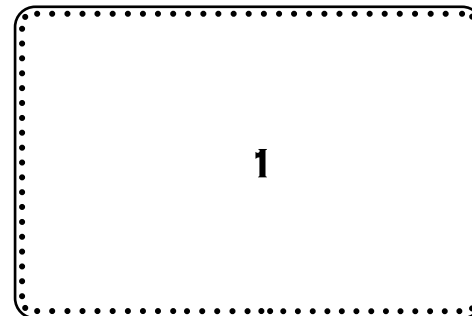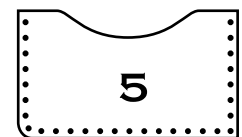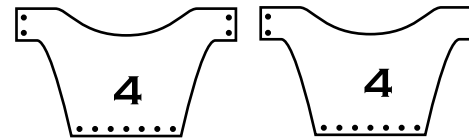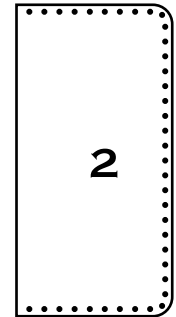




YOU SHOULD KNOW

PAPER BINDER CLIPS ARE PERFECT FOR HOLDING LAYERS OF LEATHER TOGETHER WHILE YOU STITCH. THEY SERVE THE PURPOSE OF SEWING PINS.






ALL STITCHING START POINTS ARE MARKED WITH A STAR.




FLESH VS. GRAIN COLORATION

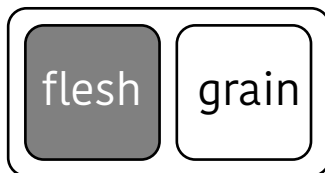


STEP 1: (Optional) Burnish everywhere marked by the grey lines below:

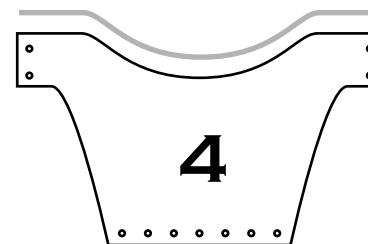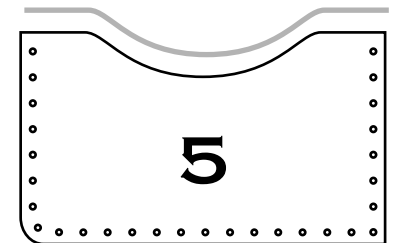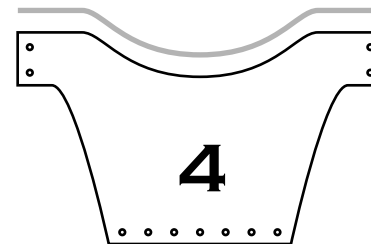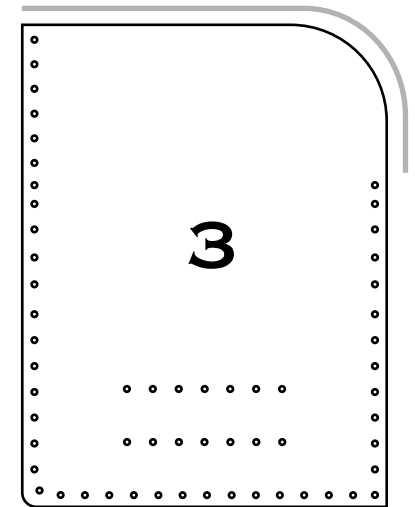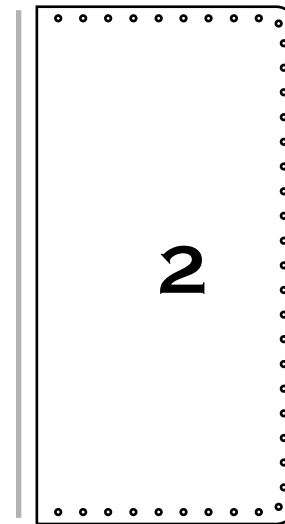


STEP 2: Saddle stitch the seven hole bottom seam of one T-pocket (4) onto the boarding pass pocket (3). Prepare your needles. Lay one T-pocket (4) onto the boarding pass pocket (3) flesh side to grain side, lining up the seven holes at the bottom of the T-pocket (4) to the top seven holes on the boarding pass pocket (3). Begin your saddle stitch by threading the needle through the farthest left hole. Saddle stitch the T-pocket (4) onto the boarding pass pocket (3) until you reach the farthest hole on the right. Back stitch and pull both needles though to the grain side of the T-pocket (4). Snip and carefully bun threads. **** tip: using a heavy object, flatten down these stitches ****

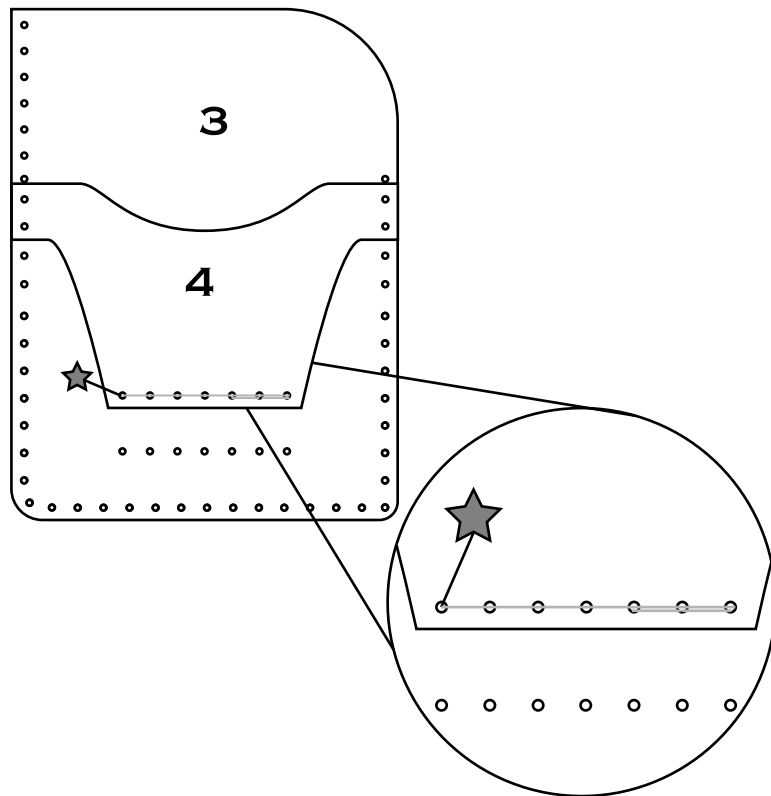


STEP 3: Saddle stitch the second T-pocket (4) to the boarding pass pocket (3). Prepare your needles. Lay the second T-pocket (4) onto the boarding pass pocket (3) flesh side to grain side, lining up the seven holes at the bottom of the T-pocket (4) to the bottom seven holes on the boarding pass pocket (3), below the stitching you did in step 2. Begin your saddle stitch by threading the needle through the farthest left hole. Saddle stitch the T-pocket (4) onto the boarding pass pocket (3) until you reach the farthest hole on the right. Back stitch and pull both needles though to the grain side of the T-pocket (4). Snip and carefully bun threads. **** tip: using a heavy object like a hammer, flatten down these stitches ****

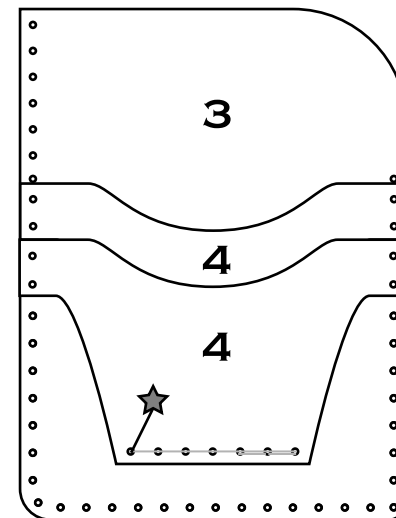

STEP 4: Saddle stitch the card pocket (5) and both T-pockets (4) onto the boarding pass pocket (3). Prepare your needles. Lay the card pocket (5) onto the boarding pass pocket (3), aligning the bottom seam of the card pocket (5) with the bottom seam of the boarding pass pocket (3). Begin with your needle in the top hole of the right, curved side seam of the boarding pass pocket (3). As you do the first saddle stitch, your needle will go into the first hole of the top T-pocket (4) and the second hole of the boarding pass pocket (3). Continue to saddle stitch down both T-pockets (4), making sure to stitch the right side seam of the card pocket (5). When you reach the bottom hole on the right side seam of the card pocket (5), back stitch. Pull both needles through to the flesh side of the boarding pass pocket (3), snip and carefully burn threads.

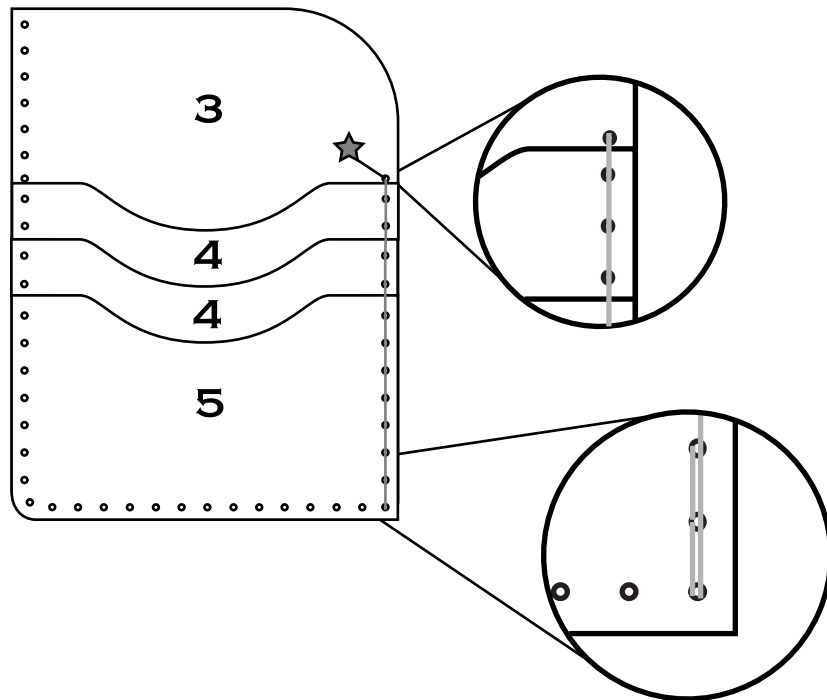

STEP 5: (Optional) Sand then burnish the edge of the boarding pass pocket (3) where the seam is meeting the t-pockets (4) and the card pocket (5) as shown by the grey line below:

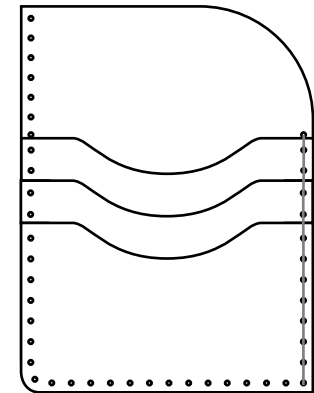


STEP 6: Saddle stitch the passport pocket (2) and the assembled boarding pass pocket (3) to the front panel (1). Note the bottom left of the front panel (1). Lay the passport pocket (2) onto the right side of the front panel (1) and the assembled boarding pass pocket (3) onto the left side of the front panel flesh side to flesh side. Binder clips are helpful at this point. Begin with your needle in the bottom right corner of the passport pocket (2) going through to the bottom right corner of the front panel (1). Start to saddle stitch to the left, stitching along the bottom seam of the passport pocket (2). Continue your stitch through to the single layer of the front panel (1). Make sure to add in the assembled boarding pass pocket (3) along the bottom seam. Keep saddle stitching all the way up the left side of the boarding pass pocket (3), around the top right corner of the front panel (1). Stitch along the entire top seam of the front panel (1), making sure to attach the top seam of the passport pocket (2). Continue to stitch down the right side of the passport pocket (2) until you reach the bottom right corner where you started. When you get to your first stitch, continue for three more saddle stitches. This will act as your back stitch. Pull both needles through to the grain side of the passport pocket (2). Snip and carefully burn threads.

BUCKLEGUY



LEATHERCRAFT SUPPLY

STEP 7: (Optional) Sand and burnish outer edge marked by the grey line below.

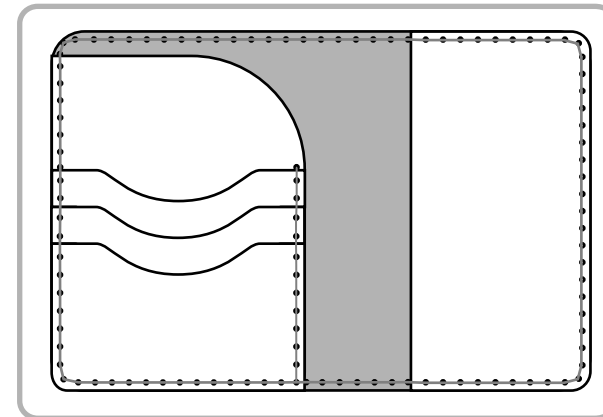

There is a sticker on the flesh side of the front panel (1) denoting the lower left corner.

BOTTOM LEFT

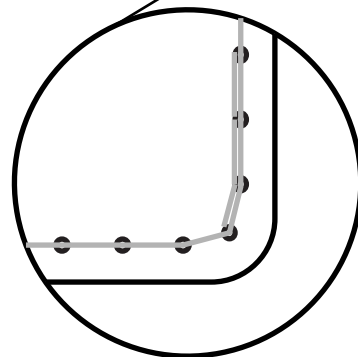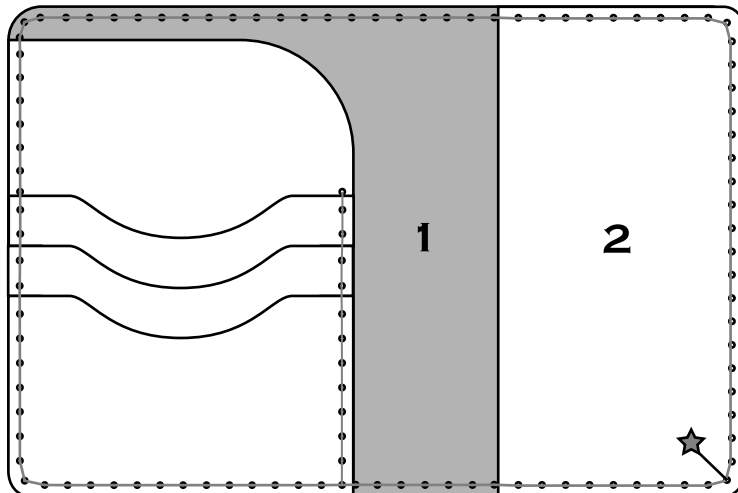

ALL DONE! ENJOY YOUR NEW
PASSPORT COVER!

THANKS FROM ALL OF US AT BUCKLEGUY!

SHARE YOUR PROJECTS WITH US ON
SOCIAL MEDIA

BY USING THE HASHTAG #BGKITS

